 


REMINGTON®

**Smooth & Silky® Plus
Wet/Dry Rechargeable
Body Contour™ Shaver**

Use & Care Manual

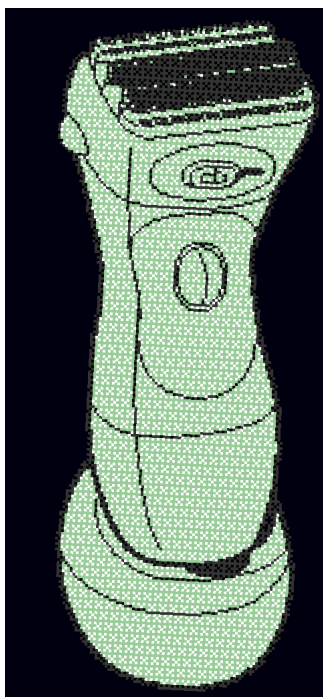

WDF-5000 (shown)/WDF-3000

IMPORTANT SAFETY INSTRUCTIONS

When using your shaver, basic precautions should always be observed, including the following. Read all instructions before using this shaver.

DANGER

To reduce the risk of electric shock:

- Do not place or store shaver or charging stand where it can fall or be pulled into a tub or sink. Do not place in or drop charging stand into water or other liquid.
- Except when charging, always unplug this charger from the electrical outlet immediately after using.
- Unplug charging stand before cleaning.
- Only use Remington supplied charging stand to charge shaver. Do not attempt to plug any cord directly into shaver.

WARNING

To reduce the risk of burns, fire, electric shock, or injury:

- Your shaver should never be left unattended when plugged in, except when charging your rechargeable shaver.
- Close supervision is necessary when this shaver is used by, on, or near children or invalids.
- Use this shaver only for its intended use as described in this manual. Do not use attachments not recommended by the manufacturer.

- Keep the cord away from heated surfaces.
- Never operate this shaver if it has a damaged cord or plug, if it is not working properly, if it has been dropped or damaged, or the charging stand has been dropped into water. Return the shaver to a service center for examination and repair.
- Never drop or insert any object into any opening.
- Do not use with charging stand outdoors or operate where aerosol (spray) products are being used or where oxygen is being administered.
- Do not use this shaver with a damaged or broken cutting head, as facial injury may occur.
- Always attach shaver to charging stand, then plug to outlet. To disconnect, turn all controls to OFF, then remove plug from outlet.
- Always store your shaver and charging stand in a moisture-free area.
- Dispose of used batteries properly. Do not incinerate. Batteries may explode if overheated. Do not wrap in metal or aluminum foil. Wrap in newspaper before discarding. It is suggested that you contact local town/city officials to determine proper battery redemption site(s) in your area.
- Do not attempt to recharge alkaline, heavy-duty or regular batteries in a battery charger.
- For "Household Use Only."

SAVE THESE INSTRUCTIONS

Congratulations, you now own the Remington® Smooth & Silky® Body Contour™ Shaver. This shaver can be used **wet** with foam lather or soapy lather which provides a smoother, closer shave for some users, or **dry** as a regular shaver. The shaver is totally submersible so you can clean it by rinsing under a faucet. **Do not submerge the charging stand in water.**

The charging stand with AC cord features a built-in automatic voltage converter, for international use. Plug the charging stand into any wall outlet, and the unit automatically converts to whichever voltage is being used.

(Some countries may require the use of a special plug or adapter which is not included.)

 
CAUTION

1. Persons who are skin sensitive to cosmetics, or are easily irritated by shaving, or suffer from skin allergies, should test a section of the arm or leg before using the shaver.
2. Because the foils are very thin and specially formed, do not press hard against the foils nor drop them. Warped or damaged foils will produce poor shaving results. Also, damaged foils may cause injury to the skin. If damage should occur, immediately replace the foils.
3. When rinsing your shaver, use cold or warm water. DO NOT use hot water, sea water, or cleanser.
4. Do not leave the unit submerged in water.
5. To prevent possible damage to the cutter assembly and foils, persons who use underarm deodorants must clean and dry the foils and cutter assembly thoroughly after each use.

Instructions for Charging


Before charging shaver, wipe off any moisture from the shaver and charging stand. Do not place shaver into charging stand while shaver or hands are wet. Always charge shaver in a cool, dry place.

- To charge your shaver, connect the cord from the charging stand to your electric outlet.
- Be sure shaver is "OFF" before placing on the charging stand. The green charge indicator light indicates your shaver is charging.
- Charge shaver for 18-24 hours before using and thereafter as required. Shaver cannot be overcharged so you may leave it on the charging stand between shaves or you may remove it for a week or more before recharging.
- To avoid damaging the foils do not push on the foils when inserting the shaver into the charging stand.
- In order to preserve the life of the batteries, they should be fully discharged every six months and then fully charged for 24 hours.



INSTRUCTIONS FOR USE

 
- Remove the headguard before shaving.
- Press the on/off button to turn unit on.
- After shaving, press the on/off button again to turn the shaver off.
- Place the unit back on the charging stand for storage and/or recharging.



Trimmer Button Operation

The trimmer slide button, located at the front of the shaver head, has three settings that control the position of the trimmer(s):

 Setting 1 - Short Hair/Stubble (button all the way to the left): Trimmer(s) retracted out of the way.



Setting 2 - Short and Long Hair/Last Shave Over Two Days Ago (button center position): Trimmer(s) at same level as the foils.

Setting 3 - Long Hair (button all the way to the right): Front trimmer pops up to trim longer hair.

NOTE: WDF-5000 model has two trimmers. WDF-2000 model has one trimmer.

HYPO-ALLERGENIC GOLD FOILS (WDF-5000 only)

Your new Smooth & Silky® Plus Body Contour™ Shaver comes with hypo-allergenic gold foils that will help prevent aggravating skin irritations such as bumps or rashes after shaving.

 
TO SHAVE UNDERARMS, LEGS, ARMS AND BIKINI AREA

If you shave regularly:

- Slide the trimmer button to the left (short hair/stubble) or center (short and long hair/last shave over two days ago) position.

For long hair trimming:

- Slide the trimmer button all the way to the right to raise the front trimmer.
- Tip the shaver slightly, allowing the front trimmer to glide along the skin to remove long hairs.
- Move the front trimmer against the direction of hair growth.
- When finished trimming the long hair, slide the button back to the left (short hair/stubble) or center (short and long hair/last shave over two days ago) position to remove the remaining short hairs.

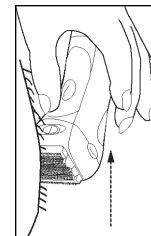


Using Shaver with Soap or Foam Lather

When using soap or foam lather the shaver will glide smoothly over the skin, cleansing away oil residue while at the same time leaving skin soft and smooth.


Apply the soap or foam generously to the skin. Do not use shaving cream of the non-lathering type, nourishing cream or skin lotion.

Clean shaver after every use (see "Cleaning Your Shaver")


 
Product Features

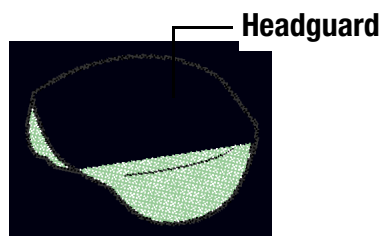

 
Head Assembly Release Button (one each side)

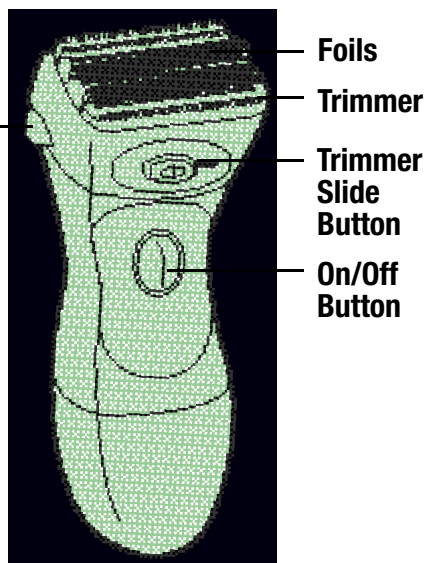

  - Foils
- Trimmer
- Trimmer Slide Button
- On/Off Button


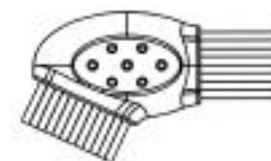
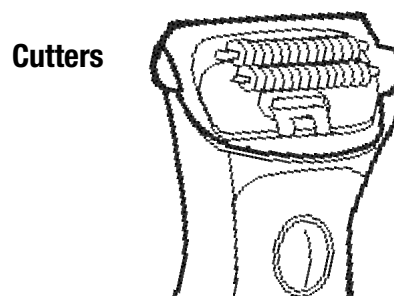


Cleaning Brush

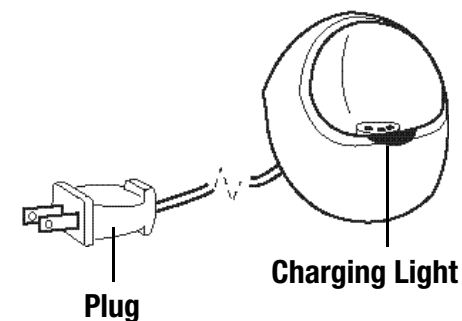 

Cleaning Your Shaver

   - Turn shaver "OFF".
- Press the two side release buttons to remove the head assembly.
- Remove the foil assembly.
- To clean foils, grasp foil by the ends between two fingers and tap lightly on a hard surface to remove any loose hairs. Or, you may rinse the foils under cold or warm running water.



To avoid damage to the foils, *DONOT* use the brush to clean foils, nor attempt to replace or remove the head assembly while the shaver is running.

- Use the cleaning brush to help remove any loose hairs from the cutters and trimmers. You may also rinse the shaver under cold or warm running water, or in a basin. *DO NOT* use hot water.

After cleaning, replace the foils and head assembly. If rinsed with water, hold shaver facing downward into sink, and turn on for a few seconds to dispel additional water - a gentle shake will help. Wipe the surface of the main unit with a dry towel.

To clean the external surfaces of the shaver, use a damp cloth. A mild detergent may be used. *DONOT* use strong detergents or other chemicals. Wipe dry with towel. *DONOT* use hairdryer or heater to dry shaver.

When is it time to replace your foils and cutters?

It is very important to replace your foils and cutters when necessary to ensure a close, comfortable shave without irritation. We recommend that the foils be replaced every 6 months and cutters be replaced every 12 months. Here are some signs of foil and cutter wear, indicating that replacement is needed.

IRRITATION: As the foils get excessively worn, there may be some skin irritation. This would be especially noticed when applying lotion. When the cutters wear, you may feel a sense of "pulling" and a loss of closeness when you shave. This is an indication that it is time to replace your cutters and foils. Visually check the foils for any signs that the cutters have worn through the foils. It is always best when replacing the cutters to replace the foils at the same time. To avoid possible damage, it

is not recommended to remove the cutter and trimmer assembly or cutter, except for replacement.

NOTE: WDF-5000 model uses SP-118 replacement MicroScreen® (hypo-allergenic) and cutter, and SP-120 replacement MicroScreen® (hypo-allergenic). WDF-3000 model uses SP-121 replacement MicroScreen® and cutter, and SP-122 replacement MicroScreen®.

FOR BEST SHAVING PERFORMANCE

 
We recommend that you use your new shaver daily for two to three weeks to allow time to find an optimum shaving method for your particular type of hair growth patterns.

For assistance or help, call our customer service at 1-800-736-4648.

Battery Removal

When your rechargeable shaver reaches the end of its useful life, the batteries must be removed from the shaver, and recycled or disposed of properly in accordance with your state and local requirements.

BATTERY REMOVAL PROCEDURE:



- Remove shaver from charging stand.
- Press side buttons to remove head assembly. Remove foil assembly.
- Remove the (4) screws exposed. These hold the top housing in place.
- In order to facilitate the removal of the top housing, both cutters must be in their central position. Squeeze the ends of the cutters to bring into alignment with each other, and then pull upward. Cutters and top housing will come off together.
- Remove the (4) screws exposed. Hold the lower section of the shaver, and then pull the middle section off.
- Remove the (2) screws holding the inner frame to the lower housing. These are facing the lower housing's back wall.
- Pull inner frame assembly away from the lower housing.
- Pry and lift up the batteries from their nest at the ends further away from the motor.
- Grab batteries firmly. Pull and twist batteries to break the connection to the frame.

CAUTION: Dispose of batteries properly in accordance with your local and state requirements. Do not put in fire or mutilate your batteries when disposing, as they may burst or release toxic materials. Do not short circuit as it may cause burns.

Remington® Money-Back Offer

You have just bought one of the finest shavers available today. If for any reason within 30 days of purchase of your Remington® Smooth & Silky® Body Contour™ Shaver you are not satisfied with your shaver and would like a refund, just return your shaver, together with the sales receipt, to the retailer from whom you purchased it. Remington will reimburse all retailers who accept shavers within 30 days of purchase. If you have any questions regarding this money-back guarantee, please call 1-800-736-4648 in the United States or 905-470-9400 in Canada.

Full Two-Year Warranty

Remington warrants that your product, except as noted below, is, on date of purchase, free from defect in material and workmanship. Remington will correct any such defect without charge if you return the complete product either in person or by mail, postage paid, to a Remington Company-owned Service Center or Authorized Service Dealer within two years after the date of purchase with the returned item.

Do not return the product to the retailer from whom the product was purchased.

This warranty does not cover damage by accident, misuse, abuse or by affixing an unauthorized accessory or alteration to the product, or by connection of the product to any but the specific current and voltage indicated in an accompanying instruction booklet, or by any other conditions beyond our control. REMINGTON SHALL NOT BE RESPONSIBLE FOR ANY INCIDENTAL, SPECIAL OR CONSEQUENTIAL DAMAGES.

For questions or comments, please write (in the United States):

Remington Products Company, L.L.C.
P.O. Box 1536
Horsham, PA 19044-6536
Attention: Consumer Affairs

In Canada:
Remington Products (Canada) L.L.C.
455 Cochrane Drive
Unit #24
Markham, Ontario L3R 9R4
Attention: Customer Service

Performance Guarantee

ALL IMPLIED WARRANTIES INCLUDING BUT NOT LIMITED TO IMPLIED WARRANTIES OF FITNESS AND MERCHANTABILITY, ARE LIMITED IN DURATION TO ONE YEAR FROM DATE OF ORIGINAL PURCHASE.

This warranty gives you specific legal rights, and you may also have other rights that vary from state to state. Some states do not allow the exclusion limitation of incidental or consequential damages or limitations on how long an implied warranty lasts, so that the above limitations and exclusions may not apply to you.

No responsibility, obligation, or liability is assumed for the installation or maintenance of this product. Warranty service must be performed by a Remington Company-owned Service Center or Authorized Service Dealer and damage or loss of any kind resulting from servicing by any other person is not covered under warranty. Enclosed is a listing of Company-owned Service Centers. Authorized Service Center Dealers may be found in the yellow pages of your directory. If you wish, you may mail the product, postpaid, to Remington Products Company L.L.C., 60 Main Street, Bridgeport, CT 06604 Attention: Service Department.

U.S. Warranty Service

In the United States, service is provided by our Company-owned Service Centers and over 300 Authorized Service Dealers. The addresses of our Company-owned Service Centers are enclosed. For the address of your nearest Authorized Service Dealer, please consult the Yellow Pages under "Shaver - Electric - Repair." If you wish, you may mail the product, postpaid, to Remington Products Company, L.L.C., 60 Main Street, Bridgeport, CT 06604, Attention: Service Department. In Canada, Remington Products (Canada) Inc., 455 Cochrane Drive, Unit #24, Markham, Ontario L3R 9R4, Attention: Service Department.

International Warranty Service

Service under the Remington warranty can be obtained outside the United States by Remington-Authorized Distributors and Service Dealers. Please consult your local telephone directory for the nearest location.

105-130 VAC 60Hz

105-240 VAC 50Hz

Questions or Comments: Please call 1-800-736-4648 in the United States or 905-470-9400 in Canada.



Visit us at www.remington-products.com



This symbol on the product's nameplate means it is listed by Underwriter's Laboratories, Inc.



Remington, Smooth & Silky, MicroScreen, Body Contour and Sheer Gold are trademarks of Remington Corporation, L.L.C. in the United States. Remington, Smooth & Silky and MicroScreen are trademarks of Remington Corporation, L.L.C. in Canada. ©1999 RPC, L.L.C. Rev. 4/99 Job #99-050 Part #13006

REMINGTON

60 Main Street, Bridgeport, CT 06604

Remington Products (Canada) Inc.
455 Cochrane Drive, Unit #24
Markham, Ontario L3R 9R4